

CominoxWizard & CominoxReader



The CominoxReader program transfers the cycle and maintenance data saved on the SterilCard® directly into the electronic storage through the SterilCard PC Reader (optional).

CominoxReader allows the following:

- Direct transfer from the SterilCard to the PC of any maintenance and cycles performed, through the SterilCard PC Reader
- Storage of performed cycle and maintenance data
- Viewing and printing stored cycles in table or graph format.

The CominoxWizard monitoring program allows you to:

- Connect simultaneously one or more sterilizers to your computer
- See in real time the status of each SterilClave® connected
- View all data on the screen
- Check cycle graph in real time
- Store data of cycles and maintenance performed
- View at any time stored cycles and print data in table or graph format.

SterilClave is connected to a PC through the standard serial port located on the back of all sterilizer models. The SterilClave models also feature a cutting-edge multiple sterilizer connection through a local LAN network that allows management of multiple units from a single PC. This connection is available via a Serial-Ethernet network cable (optional) or a Serial-Wireless (optional).

The CominoxWizard KIT INCLUDES:

- User license and installation instructions
- User manual
- Installation CD-ROM
- USB security key
- Serial cable
- Serial-USB adapter

CominoxWizard ACCESSORIES

- SterilCard PC Reader
- Serial-Ethernet Module
- Serial-Wireless Module

The CominoxReader KIT INCLUDES:

- User license and installation instructions
- User manual
- Installation CD-ROM
- USB security key
- SterilCard PC Reader

CominoxWizard & CominoxReader

| PC minimum requirements | M.U. | |
|--------------------------------------|-------|-----------------------------|
| Processor | | Pentium 4 |
| Processor speed | GHz | 1 |
| RAM | MB | 512 |
| Disk space available | MB | 50 |
| Operating system | | Windows XP / 2000 |
| Screen resolution | pixel | 1024 x 768 |
| SterilClave dedicated ports | | 1 serial and 1 USB or 2 USB |
| SterilCard PC Reader dedicated ports | | 2 USB |

STERILCARD

| | M.U. | |
|-----------------------|------|----|
| Memory available | KB | 64 |
| Maximum cycles number | | 30 |

STERILCARD PC READER

| | M.U. | |
|-------------------|--------|-------------------|
| Interface | | USB |
| Life span | cycles | 200.000 |
| Usage temperature | °C | between 0 and 50 |
| Relative humidity | % | between 20 and 90 |
| Dimensions | mm | 65,5x75x13 |

SERIAL-ETHERNET MODULE

| | M.U. | |
|-------------------|------|------------------|
| Ethernet | Mbps | 10/100 |
| Interface | | RS-232 |
| Usage temperature | °C | between 0 and 50 |
| Relative humidity | % | between 5 and 95 |
| Dimensions | mm | 75,2x80x43,3 |

SERIAL-WIRELESS MODULE

| | M.U. | |
|-------------------------------|------|------------------|
| Transmission speed | Mbps | 11 |
| Maximum transmission distance | m | 100 |
| Ethernet | Mbps | 10/100 |
| Interface | | RS-232/422/485 |
| Temperature of use | °C | between 0 and 55 |
| Relative humidity | % | between 5 and 95 |
| Dimensions without antenna | mm | 100x111x26 |
| Antenna length | mm | 109 |